

| Brand           | Item No.                 | Start Type       | Output specification |
|-----------------|--------------------------|------------------|----------------------|
| GE              | GE132-MV-N               | Instant Start    | 1-lamp               |
|                 | GE132MAXP-N/ULTRA        | Instant Start    | 1-lamp               |
|                 | GE132MAX-L/ULTRA         | Instant Start    | 1-lamp               |
|                 | GE132MAX-N/ULTRA         | Instant Start    | 1-lamp               |
|                 | GE132MAX-H/ULTRA         | Instant Start    | 1-lamp               |
|                 | GE232 MA                 | Instant Start    | 2-lamp               |
|                 | GE232MV-N-DIY            | Instant Start    | 2-lamp               |
|                 | GE232MAX-G-N             | Instant Start    | 2-lamp               |
|                 | GE232MAX-G-N-DIYB        | Instant Start    | 2-lamp               |
|                 | GE232-120-RES            | Instant Start    | 2-lamp               |
|                 | GE232-120RESDIYB         | Instant Start    | 2-lamp               |
|                 | GE232MAX-L/ULTRA         | Instant Start    | 2-lamp               |
|                 | GE232MAX-N/ULTRA         | Instant Start    | 2-lamp               |
|                 | GE232MAX-H/ULTRA         | Instant Start    | 2-lamp               |
|                 | GEM220TS120/2-DIY        | Magnetic Ballast | 2-lamp               |
|                 | GE-232-MV-PS-N           | Programmed Start | 2-lamp               |
|                 | GE332MAX-H/ULTRA         | Instant Start    | 3-lamp               |
|                 | GE332MAX-G-H             | Instant Start    | 3-lamp               |
|                 | GE432MAX-G-N-DIYB        | Instant Start    | 4-lamp               |
|                 | GE432MAX347-N            | Instant Start    | 4-lamp               |
|                 | GE432MAXP-N/ULTRA        | Instant Start    | 4-lamp               |
| PHILIPS Advance | ICN-1P32-N               | Instant Start    | 1-lamp               |
|                 | IOPA-1P32-N              | Instant Start    | 1-lamp               |
|                 | ICN-2P32-N               | Instant Start    | 2-lamp               |
|                 | REB-2P32-SC              | Instant Start    | 2-lamp               |
|                 | IOP-2P32HL-SC            | Instant Start    | 2-lamp               |
|                 | IOPA-2P32-LW-N           | Instant Start    | 2-lamp               |
|                 | IOPA-4P32-N              | Instant Start    | 4-lamp               |
|                 | IOPA-4P32-LW-N           | Instant Start    | 4-lamp               |
|                 | IOPA-4P32-SC             | Instant Start    | 4-lamp               |
| OSRAM/SYLVANIA  | QTP 1X32T8/UNV ISN-SC    | Instant Start    | 1-lamp               |
|                 | QHE 1X32T8/UNV ISH HT SC | Instant Start    | 1-lamp               |
|                 | QHE 1X32T8/UNV ISN-SC    | Instant Start    | 1-lamp               |
|                 | QHE 2X32T8/UNV ISL-SC    | Instant Start    | 2-lamp               |
|                 | QHE 2X32T8/UNV ISN-SC    | Instant Start    | 2-lamp               |
|                 | QHE 2X32T8/UNV ISH-SC    | Instant Start    | 2-lamp               |
|                 | QHE 2X32T8/UNV ISH HT-SC | Instant Start    | 2-lamp               |

|                  |                       |               |        |
|------------------|-----------------------|---------------|--------|
|                  | QHE 3X32T8/UNV ISL-SC | Instant Start | 3-lamp |
|                  | QTP 3*32T8/UNV ISN-SC | Instant Start | 3-lamp |
|                  | QTP 4X32T8/UNV ISN-SC | Instant Start | 4-lamp |
|                  | QHE 4X32T8/UNV ISN-SC | Instant Start | 4-lamp |
| <b>UNIVERSAL</b> | B132IUNVHP-N          | Instant Start | 1-lamp |
|                  | B132IUNVHP-B          | Instant Start | 1-lamp |
|                  | B2321347HP-A          | Instant Start | 2-lamp |
|                  | B232IUNVEL-N          | Instant Start | 2-lamp |
|                  | B232IUNVHP-N          | Instant Start | 2-lamp |
|                  | B232IUNVHEH-A         | Instant Start | 2-lamp |
|                  | B332IUNVHE-A          | Instant Start | 3-lamp |
|                  | B432IUNVEL-A          | Instant Start | 4-lamp |
|                  | B432I347HP            | Instant Start | 4-lamp |
| <b>SUNPARK</b>   | 120-2/32IS MPF        | Instant Start | 2-lamp |
|                  | U-4/32ISE-LBF         | Instant Start | 4-lamp |
| <b>HALCO</b>     | EP132IS/MV/MC         | Instant Start | 1-lamp |
| <b>ESPEN</b>     | VE232MVHIPLE          | Instant Start | 2-lamp |
| <b>ROBERTSON</b> | ISU232T8120           | Instant Start | 2-lamp |
| <b>STANDARD</b>  | E232T8IS120-277/N/AS  | Instant Start | 2-lamp |

NOTE:

1. The ballasts model list on the chart have been tested and approved by the manufacturer.
2. This list is to be used as a general guideline. The LED tube may not work if the ballast is over 5 years old or has a weak starting voltage.
3. Please strictly follow the wiring diagram shown on the ballasts.
4. Please check if the contact points of the old fixture work normal.
5. Please use caution and test lamps in a fixtures for an extended period of time to ensure proper operation.
6. Do NOT proceed with a mass installation until proper operation of the LED tube is verified.
7. For safety, please turn off power while installing tubes.