



# Led Retrofit Kit

# aleddra **LED Lighting**


## Installation Instruction

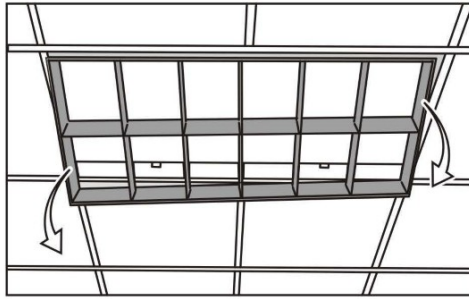


1. Turn power off and take out original cover.

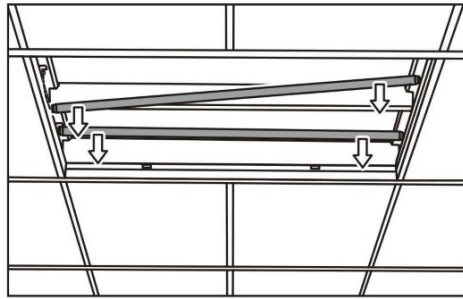


2. Take out TL tubes

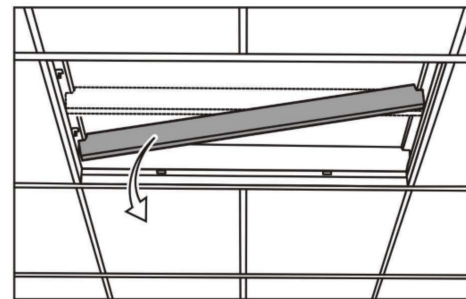


3. Remove belly pan. If remaining troffer height is limited, remove the ballast.

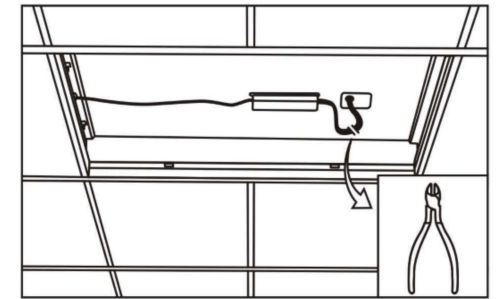


4. Disconnect host fixture ballast from mains

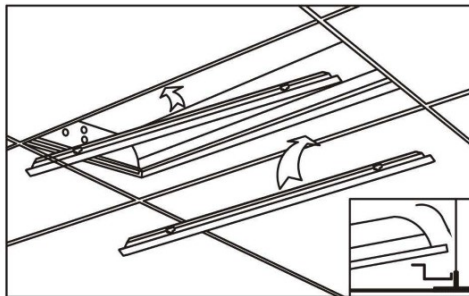


5. Install the secure latches

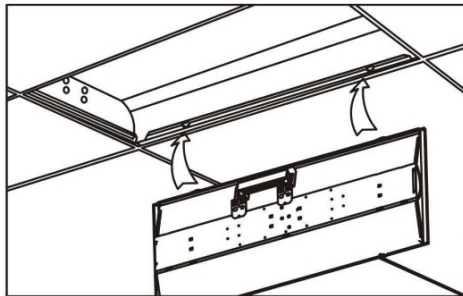


6. Install the supplied bracket

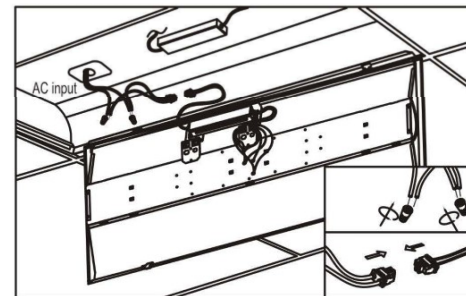


7. Connect the AC wire

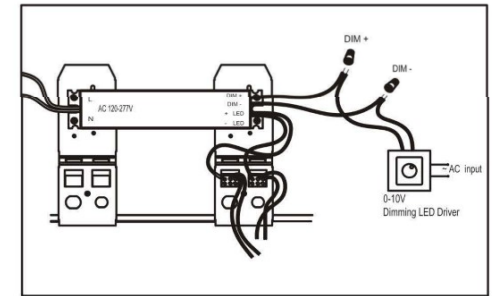

8. Connect dimming wire

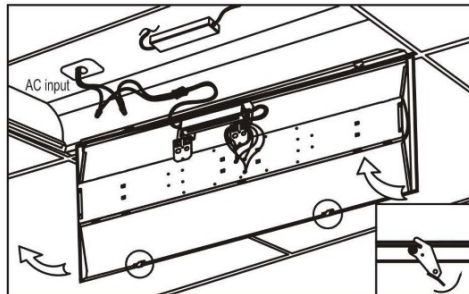

9. Assembly the LDR into the fixture hole

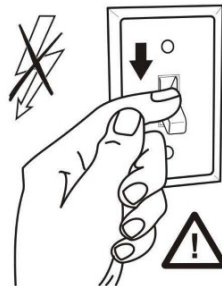

### **WARNING**

- Risk of fire. Turn off power before installation.
- Risk of electronic shock. Make installation by certified electrician with gloves.
- The fixture can not be used with intended lamp after retrofit.
- These lamps can to be used in indoor dry and damp location only .
- If the lamp or luminaire exhibits undesirable operation (Buzzing, Flickering, not working etc), immediately turn off power, remove lamp from luminaire and contact manufacturer.
- Do not make mass installation before testing.