



# POWER PACK CONTROLLER

LINE VOLTAGE

### **OVFRVIFW**

**SENSOR**WORX power pack controllers transform incoming line voltage power to Class 2 low voltage as needed by sensors or other control devices. Additionally, they switch on/off power to the connected lighting load as directed by the sensors and controls. **SENSOR**WORX power packs utilize a powerful microprocessor to optimize its switching timing in order to ensure long relay life even when controlling high-inrush LEDs and ballast loads. As with all **SENSOR**WORX products, these power packs are easy to install and incorporate features which reduce contractor labor time. An elongated chase nipple with snaps for quick installation and an optional snap-on low voltage wire chamber make for a hassle free contractor experience. All **SENSOR**WORX products are proudly made in the USA.

### BASIC OPERATION

An input signal indicating occupancy from one or more connected sensors will signal the pack's integrated relay to close. Once closed, line voltage will flow through the relay and turn on the connected lighting load. When the input signal indicates the occupied period has ended, the relay will open and lighting will switch off. This pack is also available with an auxiliary switch input to enable manual on, hold on, and hold off configurations. Partial off (e.g. auto off to 50%) and partial on (e.g., auto on to 50%) operation can also be achieved using the optional 0-10V stepped dimming output.

### **FEATURES**

- Powers Low Voltage Sensors
- Switches Line Voltage Loads
- Electronically Timed Switching Ensures Long Relay Life
- Integrated Test/Programming Button
- Plenum Rated (UL 2043)
- Optional Snap-On Attachment Provides Chamber for Low Voltage Wire Connections
- Optional Switch Input for Manual On, Hold On, or Hold Off Operation
- Optional 0-10V Stepped Dimming Ouput for Partial Off or Partial On Operation



### **SPECIFICATIONS**

#### **ELECTRICAL**

### **OPERATING VOLTAGE**

120/277 VAC

### **CLASS 2 OUTPUT RATINGS**

18 VDC, 150 mA

#### **RELAY CURRENT REQS**

55 mA

#### **LOAD RATINGS**

20A @ 120 V -General Purpose Plug Load

20A @ 120/277 VAC -General Purpose, Tungsten, Magnetic Ballast

16A @ 120/277 VAC -Electronic Ballast, LED Driver

#### **DC LOAD RATINGS**

20A @ 28 VDC (MAX) 1A @ 5 VDC (MIN)

### DIMMING LOAD

(Models with -D2 option only) 50mA, (0-10 VDC ballasts or drivers compliant with IEC 60929 Annex E.2)

#### **MOTOR LOAD**

1 HP

### **ENVIRONMENTAL**

#### **OPERATING TEMP**

32°F to 122°F (0°C to 50°C)

#### **RELATIVE HUMIDITY**

0-95% Non-Condensing, Indoor Use Only

#### **ROHS COMPLIANT**

### **PHYSICAL**

#### SIZE

3.00" H x 2.25" W x 1.88" D (7.62 cm x 5.72 cm x 4.78 cm)

#### WEIGHT

6.00 oz.

### COLOR

Blue

### MOUNTING

1/2" Knockout

### RELAY TEST BUTTON

### LED STATUS INDICATOR

Bi-color White & Blue

#### **OTHER**

LISTINGS UL/CUL









### ORDERING INFO

SAMPLE MODEL # SWX-900-AX


	PRODUCT	PRODUCT FUNCTIONALITY			VOLTAGE		AUX SWITCH INPUT		STEPPED DIMMING (0-10V)		
SWX	Power Pack	9	Single Relay + 150 mA Supply Secondary Relay 150 mA Supply	0 1 2	120/277 V	0	None Auxiliary Switch Input	Blank AX	Partial Off / On Control*	D2	
	ı		l		1		ı		*Requires -AX option		


ACCESSORY	DESCRIPTION
SWX-999	Snap-On Low Voltage Wiring Chamber

### WIRING

#### **BASIC SENSOR WIRING**

#### MODEL #: SWX-900-AX-D2

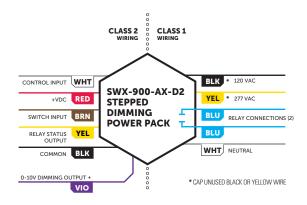

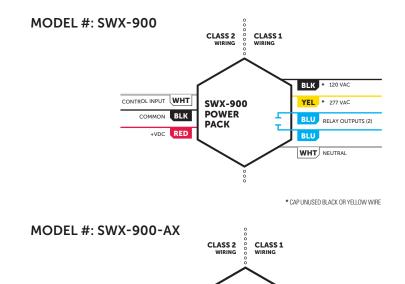

SWX-900-AX

**POWER** 

PACK

CONTROL INPUT WHT

соммон BLK

SWITCH INPUT

RELAY STATUS OUTPUT YEL

+VDC RED

BLK \* 120 VAC

YEL \* 277 VAC


WHT NEUTRAL

BLU


BLU RELAY OUTPUTS (2)

\* CAP UNUSED BLACK OR YELLOW WIRE

# COMMON WIRING CONFIGURATIONS

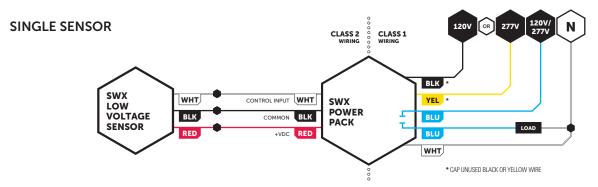


### **MULTIPLE SENSOR**

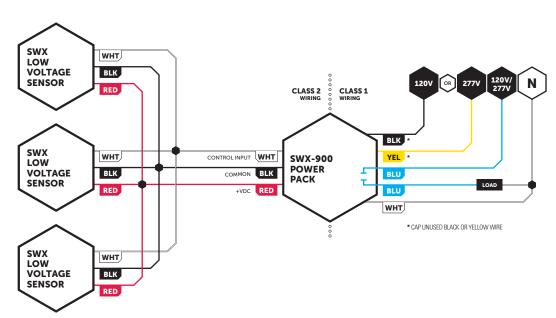


### WIRING CONT.


# MULTIPLE POWER PACKS WITH COMMON LINE FEEDS

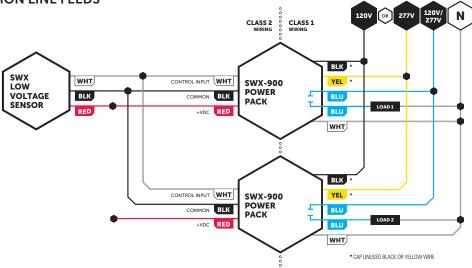

## MULTIPLE POWER PACKS WITH SEPARATE LINE FEEDS

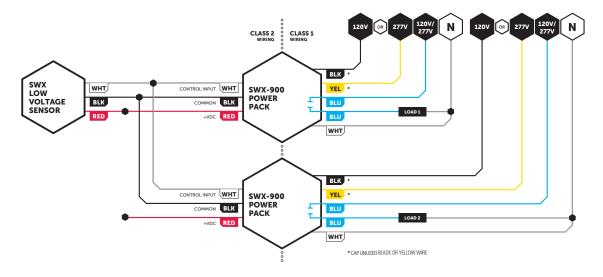


### POWER PACK w/ SECONDARY RELAY PACK

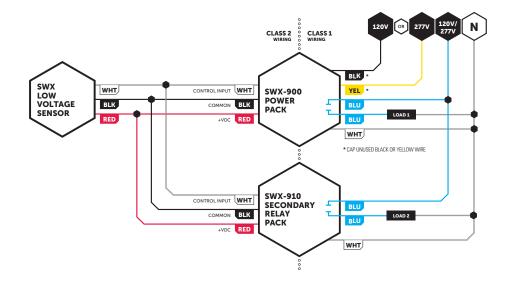


### WIRING CONT.

### POWER PACK CONNECTED TO SWITCH (requires -AX option)


- Some energy codes require Manual On (also called Vacancy) operation where an occupant is required to initially switch on lighting. The sensor then ensures lights are turned off once the space is unoccupied
- Interfacing momentary switches such as the SWX-801-xx or SWX-803-xx are recommended, however maintained switches can also be utilized
- For momentary switches, the power pack will react on the leading edge of a pulse on the brown input wire
- For maintained switches, any change of state on the brown wire that lasts longer than 0.5 seconds will be read by the power pack as one action

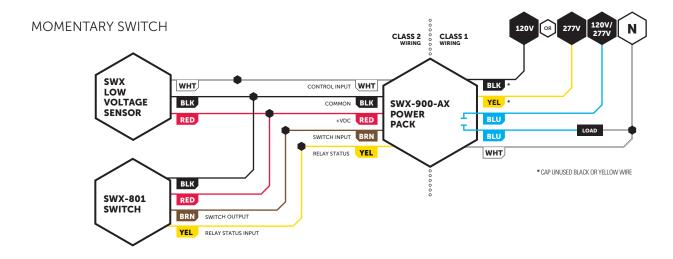

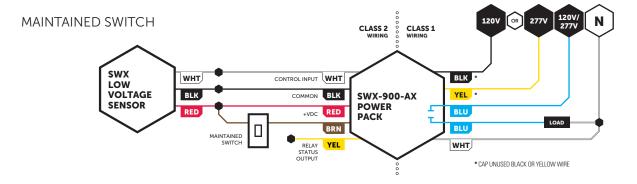

### POWER PACK w/ SWITCH SIGNAL FROM EXTERNAL SYSTEM


- Typical for Hold On and Hold Off applications
- BROWN switch input can be activated by external signals +5VDC or higher (i.e. logic high)
- For hold on and hold off applications, switch input can also be configured to activate on logic low

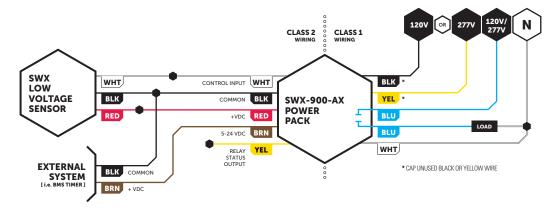

### WIRING CONT


### MULTI-WAY SWITCHING (requires -AX option)

- Switching a powerpack from multiple locations (i.e., 3-way, 4-way switching) can be achieved using multiple SENSORWORX model# SWX-801-xx switches or a
  combination of one model# SWX-803-xx dimmer and one or more model# SWX-801-xx switches.
- Note that only one dimmer should be used per multi-way application.

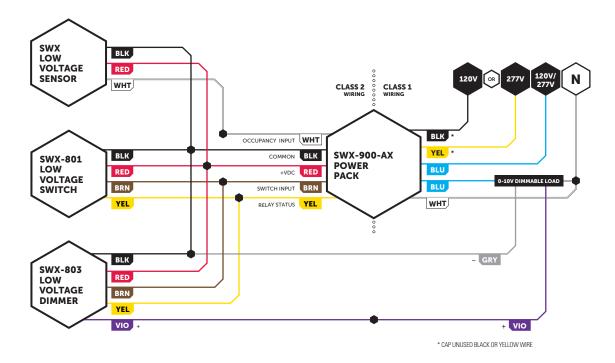

### PARTIAL OFF or PARTIAL ON OPERATION (requires -AX-D2 options)


- For areas such as stainwells, the SWX-900-AX-D2 unit can be used to achieve Partial Off operation where lighting is at the full bright level when occupied and dropped
  to the 50% level during unoccupied periods.
- Partial On operation is also enabled by the SWX-900-AX-D2 unit. In this configuration lighting is only allowed to automatically turn on to a 50% level. Once on, an occupant may step lighting to the 100% level by pressing a wall switch. The sensor then ensures lights are turned off once the space is unoccupied.
- When in partial on mode the SWX-900-AX-D2 unit will turn on connected 0-10V lighting to 50% (level is user configurable) once initially triggered from an occupancy sensor or manual switch. The unit will then step lighting up to 100% (level is user configurable) when the connected switch is pressed. Lighting will turn off if another switch press is detected or when all connected sensors go to their unoccupied state.
- Additional configurable parameters include; Turn On Dim Level, Turn Off Scheme, Fade On/Fade Off Rates, and High/Low Dimming Trim Levels.
- Using the SENSORWORX model# SWX-801-xx momentary switch is recommended for this application, however other manufacturers switches may also be utilized.

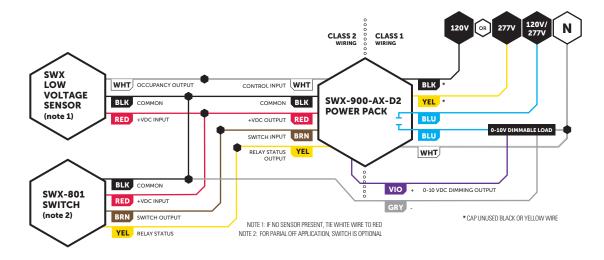

### APPLICATION NOTES

#### MULTI-ZONE AND BI-LEVEL SWITCHING


Rooms with multiple lighting zones or bi-level lighting often want one zone/level to switch on automatically, with the occupant able to manually switch on the additional zone/level if desired. Both zones/levels are then switched off automatically by the sensor once unoccupied. Two **SWX-900-AX** power packs are wired to switches, however one unit is set to Automatic On mode while the other is set to Manual On mode. In this configuration, lighting can be switched off manually or automatically via the occupancy sensor.

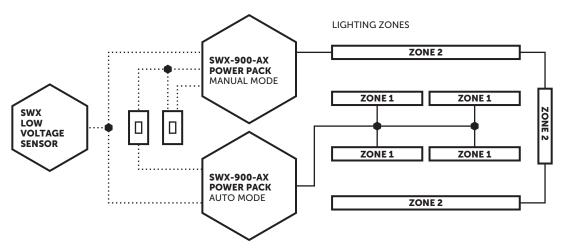

### LOAD SHED / HOLD OFF APPLICATION (e.g. OPEN OFFICES)

The occupancy sensor connected to both power packs normally keeps all lights on when the space is occupied. When a load shed (override off) command is given (by BMS, utility meter, etc.), lights connected to **SWX-900-AX** are held off. Remaining lights connected to **SWX-900** are still controlled by the sensor.


#### LIGHTING

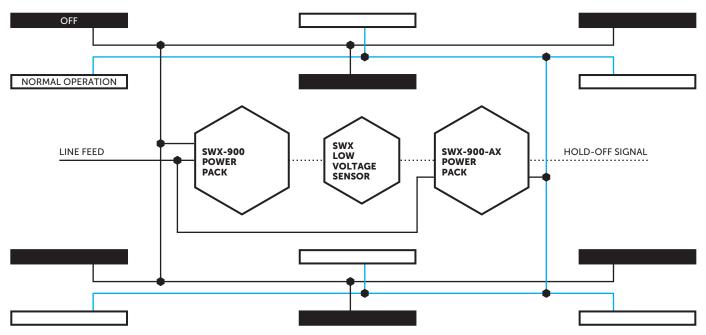

### APPLICATION NOTES CONT.

### SENSOR OVERRIDE / HOLD ON APPLICATION (e.g. RETAIL)

During open hours, a signal from a time clock (connected to the BROWN switch input on the **SWX-900-AX**) holds lights on, regardless of occupancy. After hours, the clock's schedule releases the hold on signal enabling the occupancy sensor to take over.

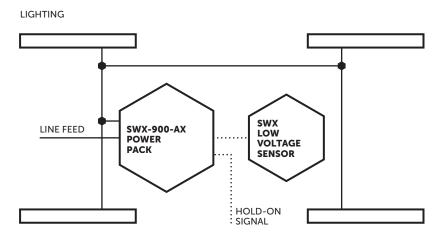

#### POWER PACK CAPACITY

**SWX-900** series power packs can supply power to several occupancy sensors and additional secondary relay packs. Following the below formula ensures adequate power will be available. Note the **SWX-900's** relay has already been factored into the formula.

[(# of PIR SENSORS\*) x2mA] + [(# of DUAL TECH SENSORS) x10mA] + [(# of SWX-910) x55mA] < [(# of SWX-900) x95 mA]

PIR SENSORS OR LOW VOLT. WALL SWITCHES			DUAL	TECH SENSORS	l	SECONDARY PACKS SWX-910			TOTAL		POWER SUPPLIED
#	POWER REQUIRED	+	#	POWER REQUIRED	+	#	POWER REQUIRED	=	POWER REQUIRED	<	BY ONE SWX-900
15	30mA	+	0	0	+	0	0	=	30mA	<	95mA
15	30mA	+	0	0	+	1	55mA	=	85mA	<	95mA
0	0	+	9	90mA	+	0	0	=	90mA	<	95mA
7	14mA	+	8	80mA	+	0	0	=	94mA	<	95mA
*or low voltage wall switches											

### INSTALLATION OPTIONS

